

APS THOR Grenade Launcher

Operation Manual



Step 1

Make sure the safety is on at all time unless you are ready to fire.



Step 2

Push the cocking lever down.



Step 3

Press down the barrel release button to open the barrel



Step 4

Barrel Opened



Step 5

Insert a charged 40mm Grenade Shells into the barrel







OMPROMISE IS NOT AN OPTIO



Step 6

Close the barrel and push the cocking lever up

Step 7

After the cocking lever is being pushed up, you are ready to fire Safety Off, aim at the target and press the trigger to fire.

Repeat Step 1 ~ Step 6 again if you want to re-load and fire another new round of grenade

Enjoy playing with APS THOR Grenade Launcher